



### Factory Reset Instructions for DC CEA-2045 Wi-Fi module

1. Make sure the DC module has been powered for over 25 seconds and the blue LED is generally ON.



2. Insert Paper clip into the hole at top edge of DC module, and push gently on Factory Reset button for over 7 seconds until LED goes OFF.



3. Remove paper clip.



4. If you have been successful, you will see the LED briefly become Fuscia (Pink) and then go back to Blue as module reboots.



5. If you do not see the Fuscia LED color, please begin again.